

Heavy Duty Portable Warning Light Colored Battery Powered Strobe, Visual Safety Light Instruction Manual

Do not attempt installation until you are familiar with all procedures outlined within this instruction sheet.

SAFETY NOTICES

- Failure to follow all safety precautions and instructions may result in property damage, serious injury or death to you or others.
- The use of a warning device does not eliminate the hazard nor the user's responsibilities. Carefully evaluate your hazard condition and take all appropriate actions.

SAFETY MESSAGE TO INSTALLERS

Follow all instructions shipped with this product.

- Read and understand all instructions before installing or operating this equipment.
- After installation, test the light system to ensure that it is operating properly.
- After testing is complete, provide a copy of this instruction sheet to all operating personnel.
- Establish a procedure to routinely check the light system for proper activation and operation.

MOUNTING

The HDFL-BP can be bolted to a solid plate using the supplied ½" bolt. It can also be hung from the dome ring or set on a flat non-vibrating surface.

WARNING

Never swing the light from the dome ring or hang the light by the dome ring on a moving vehicle. Damage to the light, personal property or bodily injury may result.

Mounting hardware and installation details are left to the installer.

SERVICE AND OPERATION

1. Operation

Press the black rubber switch cover on the side of the battery housing until a click is heard. The light will begin to flash. Repeating the above procedure will shut the light off.

2. Battery Replacement

Open the battery housing by removing the ½" bolt and neoprene washer. Bend the upper housing out slightly on each side and pull the lower housing out. Install the batteries by standing in the bottom housing with the spring terminals aligned with the + and – symbols on the bottom of the battery housing.

3. Bulb Replacement

Open the battery housing by removing the 1/2" bolt and neoprene washer. Bend the upper housing out slightly on each side and pull the lower housing out. Grasp the center white housing inside the upper battery housing and pull. The battery contacts/bulb support assembly will snap out. To remove the bulb, push down and turn counter clockwise until the bulb locks. Reinstall the battery contact/bulb support assembly by positioning the switch on the side with the black switch cover. Re-insert the assembly into the upper battery housing and push until the upper housing tabs lock onto the assembly. Push the upper housing back on to the lower housing and replace the bolt and neoprene washer. Test the light to be sure it is operating properly before installing.

PLEASE VISIT LARSONELECTRONICS.COM FOR **WARRANTY** AND **RETURN** INFORMATION.