

T8 G13 Prong Tombstone for HALP Series LED Fixtures Instruction Manual

Do not attempt installation until you are familiar with all warnings and procedures outlined within this instruction sheet. These instructions are compatible for both 2ft and 4ft models.

WARNING:

RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE. CRITICAL SAFETY INSTRUCTIONS:


- TO PREVENT RISK OF ELECTRICAL SHOCK DEACTIVATE/DISCONNECT POWER SUPPLY BEFORE
- PERFORMING MAINTENANCE.
- TO REDUCE RISK OF FIRE OR EXPLOSION, DO NOT OPEN FIXTURE LENS FRAME WITHIN HAZARDOUS ATMOSPHERE(S).
- DO NOT INSTALL WHERE THE MARKED OPERATING TEMPERATURE EXCEEDS THE IGNITION TEMPERATURE OF THE HAZARDOUS ATMOSPHERE(S).
- THIS FIXTURE SHOULD BE MAINTAINED BY QUALIFIED TECHNICIANS IN STRICT ACCORDANCE WITH THE NATIONAL ELECTRICAL CODE (NEC) AND ANY STATE OR LOCAL REQUIREMENTS.

INSTALLATION

*We recommend a licensed electrician install and maintain this product.
Make sure power is disconnected prior to installation.*

Caution: Fixture can be HOT! Allow fixture to cool before handling.

1. Disconnect power to fixture.
2. Open draw latches **(A)** holding fixture lens. There are 4 latches (4ft model) on each side and 2 latches (2ft model) on each side. Simply lift each latch to free it and unlatch from lens. Keep hold of lens and remove once free from draw latches.
3. Set lens aside and remove lamps **(B)**.
4. Pinch locking tabs **(C)** to release the ballast tray. If EMG battery model **(H)**, disconnect battery before performing maintenance! Unlatch the red and white wires.
5. Pinch tombstone **(D)** to free it from the ballast tray and push out.
6. Make note of how wires are attached. If replacing multiple tombstones, do one at a time. Insert flat object into tombstone base **(E)** to unlatch wires. Detach tombstone from wires.
7. Insert wires into new tombstone in the same manner **(F)**. Push each wire in and it will automatically lock in place.
8. Insert wired tombstone into ballast tray **(G)**.
9. Reconnect EMG battery **(H)** (if applicable) and replace ballast tray. Ensure the latches are in place and no cords get pinched.
10. Replace lamps and lens removed earlier.

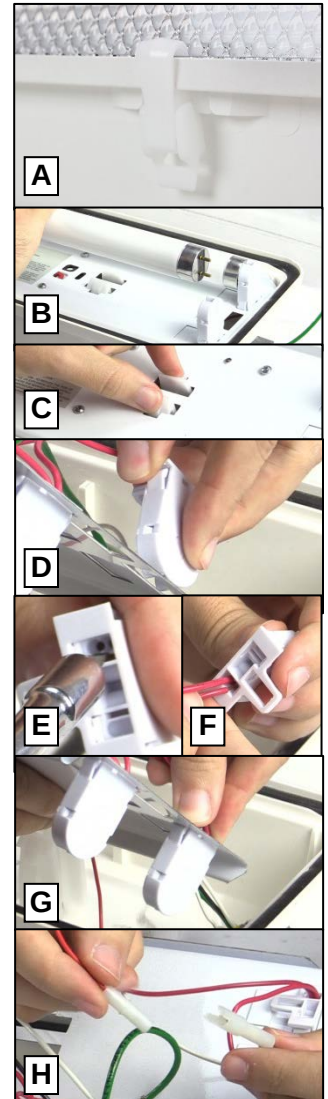

THESE INSTRUCTIONS MAY NOT COVER ALL DETAILS OR VARIATIONS OF THIS PRODUCT FOR YOUR EQUIPMENT OR INSTALLATION REQUIREMENTS. SHOULD FURTHER INFORMATION NOT COVERED BY THESE INSTRUCTIONS BE REQUIRED, PLEASE CONTACT LARSON ELECTRONICS BY EMAIL AT SALES@LARSONELECTRONICS.COM OR BY PHONE AT 1-800-369-6671 FOR FURTHER ASSISTANCE.

PLEASE VISIT LARSONELECTRONICS.COM FOR **WARRANTY** AND **RETURN** INFORMATION.