

BLG-LEDBLT-SP131

18 Watt LED Replacement Engine for BLG-LEDBLT-HGL Instruction Manual

Thank you for your purchase of the 18 Watt LED Replacement Engine for BLG-LEDBLT-HGL, the following instructions are intended for this part number only.

REPLACEMENT:

To install the new LED Light, remove all fasteners securing the old LED in place. Remove the screws holding the protective LED housing onto the light to remove the housing. Loosen or take out the two bolts on each side of the top of the tightening clamp in order to free the LED. Remove the old LED and put the new one in its place, tighten the bolts on the clamp and reinstall the protective housing around the front of the LED.



Wiring and

Plug: This replacement LED engine comes equipped with an 18" whip cable that is terminated in a Deutsch connector. Simply plug in the connector from the light to the female Deutsch connector.

Safety Warnings

For personal safety, always follow the safety instructions in this manual to ensure safe and long-term use. Failing to do so can result in damage to the product or serious bodily injury.

Warnings

To prevent serious damage to eyesight, never look into a spotlight when the light is on. **DO NOT** shine light into the face of someone else.

DO NOT touch the lens of a spotlight when the light is on or if it was recently on. The lens will be hot and could cause serious burns.

DO NOT allow children to handle or operate this light.

DO NOT use this product for other than its intended use.

DO NOT operate in close proximity of combustible or flammable materials.

DO NOT attempt to operate this light if the cord, plug, battery, bulb, or any part of the light is damaged or corroded.

For info on warranty and returns please visit our website: www.Larsonelectronics.com