

100ft Hazardous Location LED String Lights 10 Lamps - Non-Metallic - Chemical Resistant - CID2 Instruction Manual

Do not attempt operation until you are familiar with all warnings, precautions, and procedures outlined within this instruction sheet. Read carefully before operating. Retain these instructions for future reference.

WARNING:

USER SHOULD BE TRAINED IN THE PROPER USE AND MAINTENANCE OF THIS DEVICE. NO SPECIAL TRAINING REQUIRED FOR REPLACING LAMP. WHEN LAMP IS CONNECTED TO A POWER SOURCE IN HAZARDOUS AREA, PLUG AND MATCHING RECEPTACLE MUST BE SUITABLE FOR HAZARDOUS LOCATION INVOLVED. WHEN HANDLAMP IS CONNECTED TO POWER SOURCES OUTSIDE OF HAZARDOUS AREA, STANDARD DUTY PLUGS AND RECEPTACLES MAY BE USED.

STANDARD PLUG AND TRANSFORMER MUST ONLY BE CONNECTED TO A RECEPTACLE LOCATED OUTSIDE THE HAZARDOUS AREA! IMPROPER USE OF THIS HANDLAMP, ASSOCIATED PLUG, RECEPTACLE, AND CORD CAN LEAD TO SERIOUS INJURIES OR DEATH TO PERSONNEL.

PERIODIC INSPECTION OF THE LAMP AND CORD IS NECESSARY.

THE CORD MUST BE ROUTINELY CHECKED FOR CUTS, BREAKS, OR ANY SEVERE ABRASIONS, AND IF ANY ARE FOUND, THE CORD MUST BE REPLACED BEFORE RESUMING USE OF THE HANDLAMP.

THE GLOBE IS MADE OF PYREX GLASS OR POLYCARBONATE. IF GLOBE BECOMES SCRATCHED OR CHIPPED IT SHOULD BE REPLACED IMMEDIATELY.

OPERATION

1. Position each light head in desired location using D-ring.
2. Loosen the nut on the D-ring to open for attaching to cable or similar. Close D-ring by tightening the nut for a secure hold.
3. Attach power cord from lamp to **Voltage Specified on product label**.
Note: This lamp comes preconfigured to work with the selected voltage and cord cap from factory. Ensure the specifications match your power source.
4. Connect to compatible receptacle and matching power source. Connect additional units to the receptacle on output lead as necessary.

WARNING: Failure to connect proper voltage could cause damage to fixtures which may not be covered by warranty.



OPERATION

The lamps are "instant-on" and will illuminate once power is supplied.

LAMP REPLACEMENT

1. Loosen and remove guard (Turn counter-clockwise).
2. Unscrew globe (Turn counter-clockwise).
3. Remove and replace bulb with matching lamp.
4. Inspect gasket(s). If worn or damaged, it must be replaced to insure watertight seal.
5. Screw globe completely onto lamp base (Turn clockwise).
6. Replace guard (Turn clockwise).

Note: Over tightening can deform threads.

USE AND CARE

Unauthorized modification may impair the function and/or safety of the work light and could affect the life of the equipment. Always check damaged or worn out parts before using the work light. When work light is not in use, store it in a secure place out of the reach of children. Inspect for good working condition prior to storage and before re-use.

REPLACEMENT PARTS

The HAL-SL-10-LED series is designed to provide years of reliable lighting performance. Should the need for replacement parts arise, please contact Larson Electronics at the contact information below.

Should further information not covered by these instructions be required, please contact Larson Electronics at 1-800-369-6671 or sales@larsonelectronics.com for further assistance. Please visit LarsonElectronics.com for **Warranty** and **Return** information.

