

I. Installation & Operation - LED Strobe Light

I. Battery Replacement

1. Loosen the middle screw located on the back of the light. **(Fig. 1)**
2. Using a screw driver, gently pry the back cover off to access the battery compartment. **(Fig. 2)**
3. Insert 4 AA batteries and replace cover. Re-tighten middle screw. **(Fig. 3)**

Figure 1



II. Lens Replacement

1. Remove the 4 screws located on the back of the strobe light. (See below)
2. Carefully remove old lens and replace with new lens.
3. Line new lens up with the 4 screws and re-tighten. **NOTE: Do NOT over tighten screws. Doing so could cause damage to the product.**

Figure 2



Figure 3



Remove screws to replace lens.



On/Off Push Button

Operation

Press the power switch to operate. Flash modes include, strobe, steady, off.

Attach to flat surface using mount.



II. Warnings and Features

I. Warnings

Do **NOT** install damaged product.

This fixture can **NOT** be used in areas with limited ventilation or high ambient temperatures.

These instructions do **NOT** purport to cover all details or variations in equipment nor to provide every possible contingency to meet in connection with installation, operation or maintenance.

Turn off the power when performing any maintenance.

Allow fixture to cool before handling. Do not touch enclosure or light source.

Keep combustible and other materials that can burn away from fixture and lamp/lens.

To prevent serious damage to eyesight, never look directly into light when light is on.

Do **NOT** allow children to handle or operate this spotlight.

Do **NOT** use this product for anything other than its intended use.

Do **NOT** dispose of batteries in a fire as this might result in an explosion.

II. Features

100% Portable
Waterproof/Shock Resistant
Battery Powered
Constant On or Strobe Operation
Compact

III. Replacement Accessories

SL-RL-BG - Blue or Green Lens

SL-RL - Red, Amber or White Lens

SL-BM-B