

HID-22SL-REM-131

Replacement Grey Yoke Assembly for HID-22-SL Series Metal Halide Fixtures

WARNING

To avoid the risk of fire, explosion or electric shock, this product should be installed, inspected and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding conductor.
- Make sure the supply voltage is within the luminaires' voltage rating.

REPLACING YOKE ASSEMBLY

Disconnect power and remove old light head.

1. Disable power to ballast and detach line cord from light.
2. Remove light head from mounting location.
3. Loosen the screw to remove the outer ring holding the lens
4. Carefully remove the outer ring, glass lens and rubber seal.
5. Collect replacement lens and gasket assembly.
6. Remove lamp support and lamp.
7. Unscrew lens reflector from mount.
8. Remove old yoke assembly.
9. Attach lens reflector to replacement yoke assembly.
10. Replace lamp and lamp support ring.
11. Replace the gasket, glass lens and outer ring. Tighten the outer ring screw until snug. Do not over tighten.
12. Mount light head in place.
13. Connect line cord to ballast. (Refer to fixture manual.)
14. Aim new light in position.
15. Supply power to ballast.



WARNING: Fixture must be connected to ballast (not included). The unit is the light head only, no remote ballast included. Failure to comply will damage the unit and could void warranty.

MAINTENANCE

Caution: To avoid personal injury, disconnect power to the light and allow the unit to cool down before performing maintenance.

Perform visual, mechanical and electrical inspections on a regular basis. We recommend routine checks to be made on a yearly basis. Frequency of use and environment should determine this. It is recommended to follow an Electrical Preventive Maintenance Program as described in NFPA 70B: Recommended practice for Electrical Equipment.

THESE INSTRUCTIONS MAY NOT COVER ALL DETAILS OR VARIATIONS OF THIS PRODUCT FOR YOUR EQUIPMENT OR INSTALLATION REQUIREMENTS. SHOULD FURTHER INFORMATION NOT COVERED BY THESE INSTRUCTIONS BE REQUIRED, PLEASE CONTACT LARSON ELECTRONICS BY EMAIL AT SALES@LARSONELECTRONICS.COM OR BY PHONE AT 1-800-369-6671 FOR FURTHER ASSISTANCE.

PLEASE VISIT LARSONELECTRONICS.COM FOR **WARRANTY** AND **RETURN** INFORMATION.