

Replacement bulb for the RUL-9 Instruction Manual

WARNING:

READ CAREFULLY BEFORE INSTALLING FIXTURE. RETAIN THESE INSTRUCTIONS FOR FUTURE REFERENCE.

CRITICAL SAFETY INSTRUCTIONS:

- INSTALLATION SHOULD ONLY BE CONDUCTED BY A QUALIFIED ELECTRICIAN IN ACCORDANCE WITH NEC AND ANY RELEVANT LOCAL BUILDING CODES.
- RISK OF FIRE OR ELECTRIC SHOCK. FIXTURE INSTALLATION REQUIRES KNOWLEDGE OF LUMINAIRES ELECTRICAL SYSTEMS. IF NOT QUALIFIED, CONTACT A QUALIFIED ELECTRICIAN.
- BE CERTAIN ELECTRICAL POWER IS OFF BEFORE AND DURING INSTALLATION AND MAINTENANCE.
- MAKE SURE THE SUPPLY VOLTAGE IS THE SAME AS THE RATED LUMINAIRE FIXTURES VOLTAGE.
- TO PREVENT WIRING DAMAGE OR ABRASION, DO NOT EXPOSE WIRING TO EDGES OF SHEET METAL OR SHARP OBJECTS. SUITABLE FOR DAMP LOCATIONS.

BULB REPLACEMENT

1. To replace the bulb, simply unscrew the lens ring assembly from the lantern.
2. Remove the reflector. Try not to touch the reflector surface.
3. If the bulb is hot, wait for it to cool, and then pull the bulb straight out of the bulb spring.
4. Install a new bulb.
Note: When replacing dual filament bulb, align posts on base of lamp with appropriate slots in bulb spring mount in head. Both single and dual filament amps are pre-focused and do not need to be adjusted.
5. Replace the reflector and screw the lens ring assembly back onto the lantern.
6. Be sure to screw the lens ring assembly on firmly, but do not over-tighten.
7. Check O-ring each time bulb is replaced. If necessary, lubricate O-ring and inside lip of lens ring with silicone grease.
8. Replace worn, scratched or cracked O-rings.



THESE INSTRUCTIONS MAY NOT COVER ALL DETAILS OR VARIATIONS OF THIS PRODUCT FOR YOUR EQUIPMENT OR INSTALLATION REQUIREMENTS. SHOULD FURTHER INFORMATION NOT COVERED BY THESE INSTRUCTIONS BE REQUIRED, PLEASE CONTACT LARSON ELECTRONICS BY EMAIL AT SALES@LARSONELECTRONICS.COM OR BY PHONE AT 1-800-369-6671 FOR FURTHER ASSISTANCE.

PLEASE VISIT LARSONELECTRONICS.COM FOR **WARRANTY** AND **RETURN** INFORMATION.