


Replacement Remote for SL-360-M-WR Fixtures

The SL-360-M-WR-X-SP3100 replacement remote can be used to replace lost, damaged, broken, or otherwise malfunctioning remote controls for existing SL-360-M-WR fixtures.

PAIRING

To pair your new remote with your light fixture, remove the lens from the light fixture to access the control board inside. Press the pairing button, as shown below, to start the pairing process. The LED next to the button should illuminate when the button is pressed. Then, press the button on your remote to pair it with the board. That's it! The remote should now be able to control the light.

If issues persist or arise again, you can clear the pairing by holding the pairing button on the board down for 5 seconds. The LED next to the button should flash several times indicating it is cleared. Repeat pairing process above to re-pair the remote with the board.

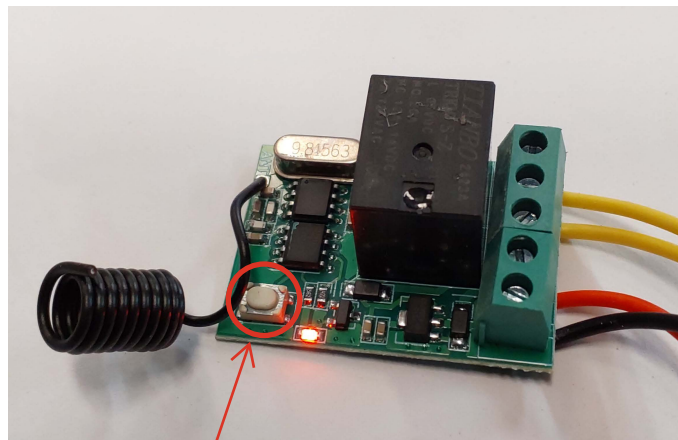

Pairing Button

USE AND CARE

Unauthorized modification may impair the function and/or safety of this device and could affect the life of the equipment. Always check for damaged or worn out parts before using the device. Store it in a secure place out of the reach of children when not in use. Inspect for good working condition prior to storage and before re-use.

REPLACEMENT PARTS

The SL-360-M-WR-X-SP3100 is designed to provide years of reliable performance. Should the need for replacement parts arise, please contact Larson Electronics.

THESE INSTRUCTIONS MAY NOT COVER ALL DETAILS OR VARIATIONS OF THIS PRODUCT FOR YOUR EQUIPMENT OR INSTALLATION REQUIREMENTS. SHOULD FURTHER INFORMATION NOT COVERED BY THESE INSTRUCTIONS BE REQUIRED, PLEASE CONTACT LARSON ELECTRONICS BY EMAIL AT SALES@LARSONELECTRONICS.COM OR BY PHONE AT 1-877-348-9680 FOR FURTHER ASSISTANCE.

PLEASE VISIT LARSONELECTRONICS.COM FOR **WARRANTY** AND **RETURN** INFORMATION.