



Larson Electronics LLC WWW.MAGNALIGHT.COM

9419 E US HWY 75, Kemp, TX 75143 - P: 903-498-3363 F: 903-498-3364 E: sales@magnalight.com

FLAH-3

BOOST MODE

A boost mode is standard with the LED head-rail light. The boost increases output by over 50%.

- To activate, simply press and hold the Boost button down. Once released, the boost automatically shuts itself off.
- Boost can be used any time, in any emitter mode. This includes, the 3 standard lighting levels, (dim, medium, and high); when it is on strobe mode, and also when it is at the off position.
- To avoid overheating, the boost lighting level will drop to High level after 20 seconds of continuous use, even if button is still being held down. If boost is being used repeatedly, the electronic system will prevent further use until LED is cool.

BATTERY LEVEL INDICATOR

The battery indicator starts to work 5 seconds after LED head/rail lamp is turned on.

- When batteries are at 90% or higher, a green light indicator will blink.
- At about 70%, indicator will blink orange.
- When battery level is below 30% the indicator will blink red.

MAINTENANCE

- Do not attempt to disassemble the LED headlight. LEDs generally have an exceptionally long life span and do not require service. If the LED is disassembled, the warranty will be voided.
- Do not allow water in battery case as it may cause malfunctioning. If used in a moist or wet environment, remove batteries and allow drying after use.

BATTERIES

Triple A (AAA) batteries are required. Either alkaline or rechargeable batteries; either are suitable.

- Do not mix new and used batteries.
- Keep batteries away from high temperature environments.
- Dispose of used batteries properly.