

Adjustable Locking Base for **LED Lights** Instruction Manual

Thank you for your purchase of the LED-ALB Adjustable Locking Base. Do not attempt installation until you are familiar with all warnings, precautions, and procedures outlined within this instruction sheet.

Safety Warnings

For personal safety, always follow the safety instructions in this manual to ensure safe and long- term use. Failing to do so can result in damage to the product or serious bodily injury.

WARNING

DO NOT attach equipment exceeding weight capacity.

DO NOT use this product for other than its intended use.

DO NOT keep fingers near pivot point while adjusting to prevent from being pinched.

DO NOT operate in rough conditions.

MOUNTING AND ADJUSTMENTS:

The adjustable base attaches to a surface via 4 bolts through the 4 holes in each corner of the base. The footprint of the base plate is 4 inches square.

This locking base is designed for surface mount LED lights. Your chosen selection for color will be shipped from factory.

PERMANENT MOUNT

The top mounting plate features a pre-drilled mount hole for securing your LED light to the adjustable base. Mount your LED light to the top plate using a bolt and nut to secure it to the available pre-drilled mount hole, pointed out in the picture below.


Angle Adjustements:

The angle of the locking base can be controlled via the spring loaded Pem stud that enables the user to easily change and lock in the angle of the base plate via index holes across the 180 degree arc. Pull the stud, make the desired adjustment, then release the stud to secure. Once the spring loaded Pem stud is released into the index hole, the angle is locked in and no amount of vibration will alter the position of the stanchion.

The angle of the top mounting plate can be controlled via the spring loaded Pem stud that enables the user to easily change and lock in the angle of the stanchion via index holes across the 360 degree circle. Pull the stud, make the desired adjustment, then release the stud to secure. Once the spring loaded Pem stud is released into the index hole, the angle is locked in and no amount of vibration will alter the position of the top mounting plate.

REPLACEMENT PARTS

The LED-ALB is designed to provide years of reliable performance. Should the need for replacement parts arise, please contact Larson Electronics.

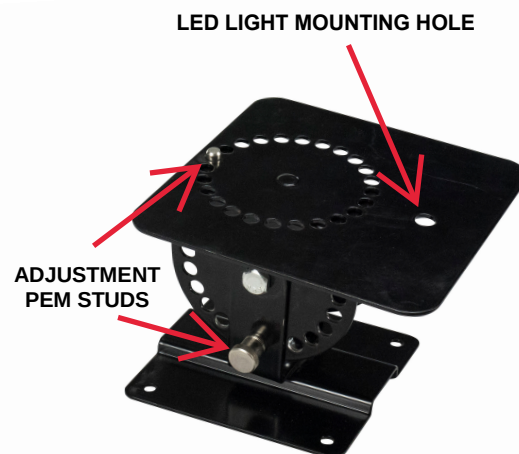

THESE INSTRUCTIONS MAY NOT COVER ALL DETAILS OR VARIATIONS OF THIS PRODUCT FOR YOUR EQUIPMENT OR INSTALLATION REQUIREMENTS. SHOULD FURTHER INFORMATION NOT COVERED BY THESE INSTRUCTIONS BE REQUIRED, PLEASE CONTACT LARSON ELECTRONICS BY EMAIL AT SALES@LARSONELECTRONICS.COM OR BY PHONE AT 1.877-348-9680 FOR FURTHER ASSISTANCE.

PLEASE VISIT LARSONELECTRONICS.COM FOR **WARRANTY** AND **RETURN** INFORMATION.