



Larson Electronics LLC WWW.LARSONELECTRONICS.COM

9419 E US HWY 75, Kemp, TX 75143 - P: 903-498-3363 F: 903-498-3364 E: sales@larsonelectronics.com

Lamp Replacement Instructions for FTL-3 and FTL-5 models:

1. Remove the worm clamp from the base handle.
2. Pull the rubber, yellow handle away from the plastic encasing tube.
3. As the handle is pulled away, the seated ballast and bulb will slide out from the plastic encasing tube.
4. The bulb is held in place with 2 end cap bulb "spiders".
5. Lay the handle/ballast and bulb assembly on a table.
6. Pull back the individual white plastic spiders on each end of the lamp. The bulb will free to remove.
7. Attach the individual white plastic spiders on each end of the new lamp and slide the entire assembly back into the plastic encasing tube.
8. Replace the worm clamp and tighten.