

120V Polyurethane Adjustable Magnetic Mount LED Work Light 30 Watt LED- Blasting Light - 25' Cord

Thank you for your purchase of the Larson Electronics LEDWP-600E-M Magnetic Mount Wall Pack Light. Please follow the steps below in order to install, operate and maintain this product.

IMPORTANT

READ CAREFULLY BEFORE INSTALLING THIS FIXTURE. SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE. THE LEDWP-600E-M MUST BE WIRED IN ACCORDANCE WITH NATIONAL ELECTRICAL CODE AND ALL APPLICABLE LOCAL CODES. PROPER GROUNDING IS REQUIRED FOR SAFETY.

WE STRONGLY ENCOURAGE ONLY A LICENSED ELECTRICIAN INSTALL, OPERATE AND MAINTAIN THIS PRODUCT. IF YOU ARE NOT QUALIFIED OR UNFAMILIAR WITH ANY ASPECT OF THIS INSTRUCTION SHEET, CONSULT AN ELECTRICIAN. THERE ARE NO SERVICEABLE PARTS INSIDE.



WARNING: MAKE SURE POWER IS TURNED **OFF** BEFORE STARTING THE INSTALLATION OR PERFORMING ANY MAINTENANCE.

RISK OF FIRE/ELECTRIC SHOCK – DISCONNECT POWER AT BREAKER BEFORE INSTALLING OR SERVICING.

RISK OF PERSONAL INJURY – FIXTURE MAY BECOME UNSTABLE OR DAMAGED IF NOT INSTALLED PROPERLY.

RISK OF BURN – ALLOW FIXTURE TO COOL BEFORE SERVICING.

MOUNTING

The WAL-M-PUR-LED-120V-25 LED light, 25' cord w/cord cap, and 150lbs magnet mount. **Ambient**

Temperature Range: -25°C to +60°

1. **Select a location to install the fixture.** This LED wall pack is IP68 waterproof, vapor proof, and built to resist the damaging effects of an outdoor environment. This fixture should not be used in areas with no ventilation or extreme ambient temperatures.
2. **Affix the mount to your chosen metal surface.** A 150lb. grip magnetic base allows the unit to be mounted to any metal surface capable of holding its weight. Run power cord to the appropriate receptacle with the **CORRECT VOLTAGE**.
3. **Lamp Adjustment.** The mount can be attached to the lamp in two locations, the lower area or middle area on the back of the wall pack. Use the loosen and tighten **wing nut** for repositioning the mount. The fixture can be placed in any direction.


WIRING

We strongly encourage a licensed electrician install this product, especially in outdoor locations where weatherproofing may be required. Universal voltage driver permits operation at 120V - 240V AC, except those factory ordered with low voltage 12V-24VDC.

Warning: Check product label for correct input voltage!

Attach supply line wires to the appropriate light fixture wires as shown in the diagram ➡

This unit comes pre-wired from factory with the selected cord length and cord cap. Take precautionary steps for weatherproofing all connections if installed in a location where water may come in contact with the unit. Ensure the unit is properly grounded.

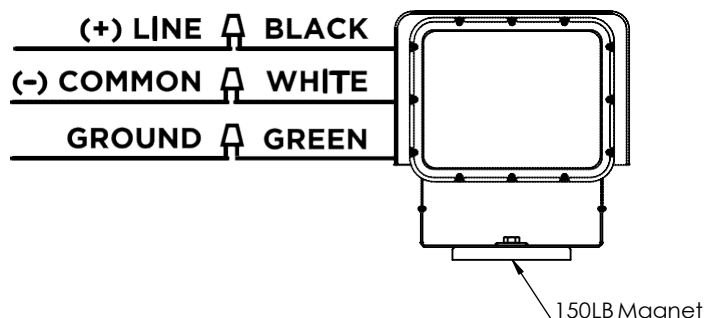

*Image above may not match product

MAINTENANCE

There are no serviceable parts inside the fixture. However, it is good practice to routinely clean and check the fixture for proper function.

- Disconnect power running to the lamp and be sure the fixture is cool to the touch.
- Use a non-abrasive glass cleaning solution to clean the lens.
- Replacement lamp – LED30W-PAR38
- Lamp is replaced by unscrewing the ring on the unit and then unscrewing the lamp. Reverse to install it.

Note: *It is not necessary to open the fixture and clean or touch the LED's.*

TROUBLESHOOTING

Refer to the guide below or contact the manufacturer if the fixture does not function properly.

- ➔ Is the correct line voltage being supplied to the fixture?
- ➔ Is the fixture properly grounded?
- ➔ Make sure installed power switches, photocells, etc. are functioning properly.

These instructions may not cover all details or variations of this product for your equipment or installation requirements. Should further information not covered by these instructions be required, please contact Larson Electronics at 1-800-369-6671 for further assistance.