

Vapor Proof Droplight / Handlamp Instruction Manual

Do not attempt operation until you are familiar with all warnings, precautions, and procedures outlined within this instruction sheet. Read carefully before operating. Retain these instructions for future reference.

WARNING:

- KEEP LIGHTED LAMP AWAY FROM COMBUSTIBLES.
- DO NOT TOUCH HOT LENS GUARD OR ENCLOSURE.
- DO NOT LOOK DIRECTLY AT LIGHTED LAMP.
- DO NOT USE IF LENS GLOBE IS CRACKED OR DAMAGED.
- USER SHOULD BE TRAINED IN THE PROPER USE AND MAINTENANCE OF THIS DEVICE.

WIRING

1. Loosen (4) set screws holding Globe Guard.
2. Remove Globe Guard assembly from handle.
3. Unscrew Globe from handle.
4. Remove compression nut by turning clockwise.
5. Use either 18/3 SOOW, 14/3 SOOW, 16/3 SOOW.
6. Run cable through compression nut, grommet, and compression ring.
7. Push through handle and wire to bulb socket.
8. Replace bulb socket into handle.
9. Tighten compression nut.
10. Add bulb to socket.
11. Replace globe and globe guard.



Unauthorized modification may impair the function and/or safety of the work light and could affect the life of the equipment. Always check damaged or worn out parts before using the work light. Inspect for good working condition prior to storage and before re-use.

USING THE HAND LAMP

This hand lamp comes preconfigured with user selected cord cap. Follow the steps below to operate the unit.

1. Position light head in desired location using stainless steel swivel hook.
2. Run cable and attach power cord to compatible outlet with output **voltage listed on product label**.

WARNING: *This hand lamp operates on selected voltage. Check product label for correct voltage! Damage from improper voltage may not be covered by warranty.*

OPERATION

The LED lamp in the hand lamp is "instant-on" and will illuminate once power is supplied.

LAMP REPLACEMENT

12. Loosen (4) set screws holding Globe Guard.
13. Remove Globe Guard assembly from handle.
14. Unscrew Globe from handle.
15. Replace with compatible lamp.
16. Screw Globe completely onto lamp base.
17. Replace Globe Guard.
18. Tighten (4) set screws securely.

Note: Over tightening can deform threads.

USE AND CARE



REPLACEMENT PARTS

The VPLHL is designed to provide years of reliable lighting performance. Should the need for replacement parts arise, please contact Larson Electronics at the contact information below.

Should further information not covered by these instructions be required, please contact Larson Electronics at 1-800-369-6671 or sales@larsonelectronics.com for further assistance.

Please visit LarsonElectronics.com for **Warranty** and **Return** information.