

HID-22SL-REM-105

Replacement 1000 Watt Metal Halide Light Head (No Ballast)

WARNING

To avoid the risk of fire, explosion or electric shock, this product should be installed, inspected and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding conductor.
- Make sure the supply voltage is within the luminaires' voltage rating.

REPLACING LIGHT HEAD

Disconnect power and remove old light head.

1. Disable power to ballast and detach line cord from light.
2. Remove light head from mounting location.
3. Mount new light head in place.
4. Connect line cord to ballast.
5. Aim new light in position.
6. Supply power to ballast.

WARNING: Fixture must be connected to ballast (not included). The unit is the light head only, no remote ballast included. Failure to comply will damage the unit and could void warranty.



MAINTENANCE

Caution: To avoid personal injury, disconnect power to the light and allow the unit to cool down before performing maintenance.

Perform visual, mechanical and electrical inspections on a regular basis. We recommend routine checks to be made on a yearly basis. Frequency of use and environment should determine this. It is recommended to follow an Electrical Preventive Maintenance Program as described in NFPA 70B: Recommended practice for Electrical Equipment.

WARRANTY

Should further information not covered by these instructions be required, please contact Larson Electronics at 1-800-369-6671 or sales@larsonelectronics.com for further assistance.

Please visit LarsonElectronics.com for **Warranty** and **Return** information.