

Portable LED Telescoping Light Tower

96 Watts - Adjustable U-Bracket - 120-277VAC - 5,760 Lumen

Instruction Manual

Do not attempt operation until you are familiar with all warnings, precautions, and procedures outlined within this instruction sheet. Read carefully before operating. Retain these instructions for future reference.

WARNING:

- KEEP LIGHTED LAMP AWAY FROM COMBUSTIBLES.
- DO NOT TOUCH HOT LENS GUARD OR ENCLOSURE.
- DO NOT REMAIN IN LIGHT IF SKIN FEELS WARM.
- DO NOT LOOK DIRECTLY AT LIGHTED LAMP.
- KEEP LAMP AWAY FROM MATERIALS THAT MAY BURN.

This WALTP series telescoping light tower comes preconfigured with selected beam pattern, cord cap, and switch from factory. Your unit may slightly differ from pictures shown in this manual.

USING THE TRIPOD

1. To assemble the tripod, begin by loosening the black adjustment knob on the tripod base. Slide the center pole through the adjustment sleeve until the legs are fully deployed. Tighten adjustment knob so legs stay fixed in place. Now you are ready to install top portion.
2. Position light head over top pole on tripod and tighten black adjustment knob until snug.
3. Connect all Deutsch connections from cable to lights and transformer.
4. Loosen black adjustment knob for each sleeve to extend tripod. Extend top pole, then bottom pole when elevating.
5. Tighten adjustment knob once desired height is achieved. The switch position can also be adjusted with the hand screw on the back.
6. Attach power cord to **Voltage: 120-277 VAC**.

Note: *The light head operates on 9-32V DC without Transformer.*

OPERATION

The removable light head features 2, 48 watt LED work lights with power switch. Power is controlled via the power switch mounted to the tripod. Do not look directly into lights when powering.

Each lamp can be adjusted independently with the adjustment screws on the sides. Tighten screws once desired angle is achieved.

The light head can be detached for stowing or transport.

USE AND CARE

Always check damaged or worn out parts before using the work light. When work light is not in use, store it in a secure place out of the reach of children. Inspect for good working condition prior to storage and before re-use.

Should further information not covered by these instructions be required, please contact Larson Electronics at 1-800-369-6671 or sales@larsonelectronics.com for further assistance.

Please visit LarsonElectronics.com for **Warranty** and **Return** information.

