


## LED18W-PAR38-RGB

### Key Functions of the Remote Control

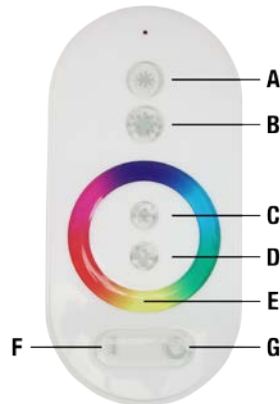

- A. Brightness Decrease / Speed Decrease
- B. Brightness Increase / Speed Increase
- C. Previous Mode
- D. Next Mode
- E. Touch Activated Color Ring
- F. Power Controller OFF
- G. Power Controller ON

**NOTE:** This PAR38 lamp can be installed in a standard E26/E27 socket and is 120-277V 50/60Hz universal voltage.


### OPERATION

1. Standard Mode: Press A to turn the Controller ON and touch the Color Ring. The controller will automatically be in User-defined color mode. Press Key C/D to use Standard Mode.
2. Standard Mode: The C/D keys are used as +/- which scrolls through 11 color operations.
  - 1.) Color Changing 2.) R,G,B Changing 3.) Color Strobe 4.) Steady Red 5.) Steady Green 6.) Steady Blue 7.) Steady Yellow 8.) Steady Pink 9.) Steady Purple 10.) Steady Blue/Green 11.) Steady White
3. Brightness Control: There are 8 levels of brightness, which is controlled by pressing A/B
4. Velocity Control: While in color strobe mode, the rate is controlled by A/B and includes 8 settings.

**NOTE:** If the controller does not work, or the light will not come on, check the batteries in the remote.

## RGB REMOTE PROGRAMMING GUIDE

The RGB remote control comes pre-programmed out of box to the included light. To control additional lights with this single remote, follow the programming guide below.

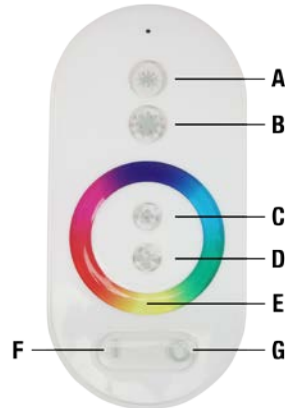

- A. Brightness Decrease / Speed Decrease
- B. Brightness Increase / Speed Increase
- C. Previous Mode
- D. Next Mode
- E. Touch Activated Color Ring
- F. Power Controller OFF
- G. Power Controller ON



### PROGRAMMING

1. Power off the lights you wish to program.
2. While holding "A" on the remote, power on the devices.
3. Three flashes indicate the light has been properly synced.
4. Continue these steps until all units are synced. Lights can be synced individually or simultaneously if on the same power source.
5. Confirm proper function of all lights with the single remote control.

### UNPROGRAMMING

1. Remove power from the lights.
2. While holding "B" on the remote, power on the devices you wish to remove.
3. Ten flashes indicate the light has been removed from the remote control.