

Low Profile Explosion Proof LED Light 2x4 Lay-In Troffer Class 1/2 Div 1/2 Paint Spray Booth Rated Instruction Manual

This explosion proof light is designed for illumination of industrial locations. It uses the latest in solid state lighting technology for long life, low maintenance and high efficiency.

The unique design focuses the light where it is needed, giving improved efficiency over a conventional HID luminaire.

An internal, universal input, power-factor-corrected switch-mode supply allows it to be used from any nominal single phase 100-277V AC power supply without any variation in light output.

WARNING

To avoid the risk of fire, explosion or electric shock, this product should be installed, inspected and maintained by a qualified electrician only, in accordance with all applicable electrical codes.

To avoid electric shock:

- Be certain electrical power is OFF before and during installation and maintenance.
- Luminaire must be connected to a wiring system with an equipment-grounding conductor.

To avoid explosion:

- Make sure the supply voltage is within the luminaires' voltage rating.
- Ensure the marked T rating is less than the ignition temperature of the Hazardous Atmosphere.
- Do not operate in ambient temperatures above those indicated on the luminaire nameplate.
- Do not operate if the lens is cracked or damaged. All fasteners should be properly seated.

For supply connections, use wire rated for at least 110°C

Recommended mounting height is 25-40 feet.

MOUNTING

This fixture offers recessed panel mounting.

1. Make sure power is turned off at the source to the location at which you are installing the fixture.
2. Remove existing troffer if applicable.
3. Place troffer in ceiling. Drill mounting holes in outer frame ONLY, as required.
4. Using approved wire connectors, connect power supply to cord whip on back of fixture. Refer to wire diagram. All local and national electrical/building codes must be followed when installing this fixture in hazardous areas. If unaware, contact local authority.
5. When complete, ensure voltage matches fixture nameplate and return power back to the source.



Installation is complete.

WIRING (see attached wiring diagram)

This unit comes preconfigured with cord whip, selected voltage, beam angle, and color temp. Once mounted, plug cord into compatible receptacle with correct voltage. **Check nameplate for proper voltage.**



WARNING: CHECK NAMEPLATE FOR PROPER VOLTAGE. DAMAGE FROM IMPROPER VOLTAGE WILL VOID WARRANTY. FIXTURE AVAILABLE IN VARIOUS VOLTAGES SELECTED UPON PURCHASE.

MAINTENANCE

Caution: To avoid personal injury, disconnect power to the light and allow the unit to cool down before performing maintenance.

Warning: No user serviceable parts inside of fixture. Risk of electric shock. Removal of the lens will void the warranty.

1. Perform visual, mechanical and electrical inspections on a regular basis. We recommend routine checks to be made on a yearly basis. Frequency of use and environment should determine this. It is recommended to follow an Electrical Preventive Maintenance Program as described in NFPA 70B: Recommended practice for Electrical Equipment.
2. The lens should be cleaned periodically as needed to ensure continued photometric performance. Clean the lens with a damp, non-abrasive, lint-free cloth. If not sufficient, use mild soap or a liquid cleaner.
3. Inspect the cooling fins on the luminaire to ensure that they are free of any obstructions or contamination (i.e. excessive dust build-up). Clean with a non-abrasive cloth if needed.
4. Do not operate if the lens is cracked or damaged. All fasteners should be properly seated.

THESE INSTRUCTIONS MAY NOT COVER ALL DETAILS OR VARIATIONS OF THIS PRODUCT FOR YOUR EQUIPMENT OR INSTALLATION REQUIREMENTS. SHOULD FURTHER INFORMATION NOT COVERED BY THESE INSTRUCTIONS BE REQUIRED, PLEASE CONTACT LARSON ELECTRONICS BY EMAIL AT SALES@LARSONELECTRONICS.COM OR BY PHONE AT 1-800-369-6671 FOR FURTHER ASSISTANCE.

PLEASE VISIT LARSONELECTRONICS.COM FOR **WARRANTY** AND **RETURN** INFORMATION.