


Replacement Double Socket and Sleeve


WARNING

- ▶ To avoid risk of fire, explosion or electric shock, this product should be maintained by a qualified electrician only, in accordance with all applicable codes and regulations.
- ▶ To avoid electric shock: Be certain electrical power is OFF before and during maintenance.


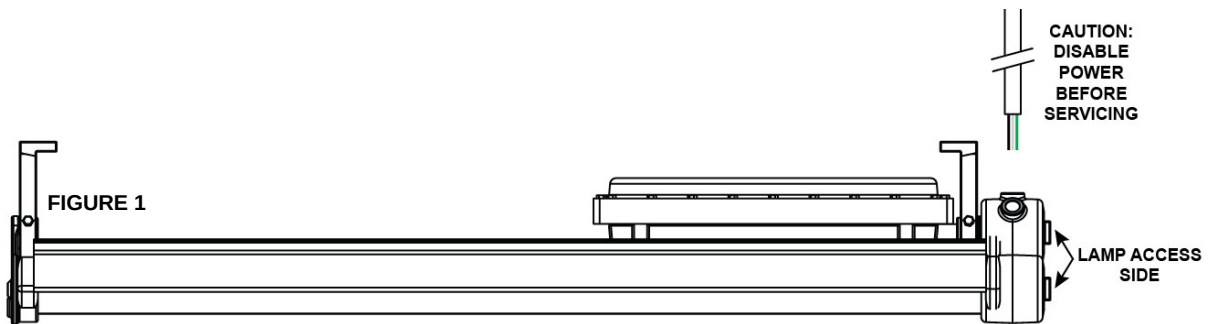


Caution: Only use lamp size, type and/or wattage as shown on fixture nameplate.

1. Disconnect power to the fixture prior to servicing. **FIGURE 1**
2. With a wrench, remove end-cap (lamp access cover) for the lamp you wish to replace. Rotate counter-clockwise. **FIGURE 2**
3. Loosen the two lamp holder bracket screws holding the old lamp. **FIGURE 3** Twist and remove the lamp holder bracket. **FIGURE 4**

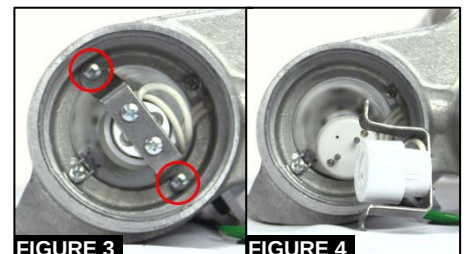

 4. Remove the old lamp and socket. **FIGURE 5**

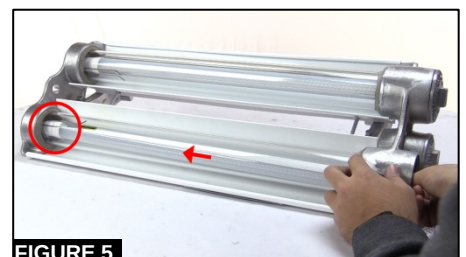

5. Replace lamp socket matching connections from previous.

6. Place lamp holder into position on the lamp. Twist slightly to place the lamp holder bracket under screw heads and tighten the screws. **FIGURE 3**



7. Reattach end-cap. Rotate clockwise. **FIGURE 6**