


RGB Remote Guide (LEDWP-600-RGB-RC)

Key Functions of the Remote Control

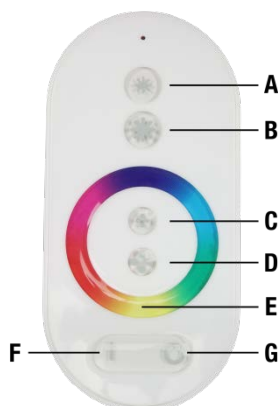

- A. Brightness Decrease / Speed Decrease
- B. Brightness Increase / Speed Increase
- C. Previous Mode
- D. Next Mode
- E. Touch Activated Color Ring
- F. Power Controller OFF
- G. Power Controller ON

NOTE: This PAR38 lamp can be installed in a standard E26/E27 socket and is 120-277V 50/60Hz universal voltage.

OPERATION

1. Standard Mode: Press A to turn the Controller ON and touch the Color Ring. The controller will automatically be in User-defined color mode. Press Key C/D to use Standard Mode.
2. Standard Mode: The C/D keys are used as +/- which scrolls through 11 color operations.
 - 1.) Color Changing 2.) R,G,B Changing 3.) Color Strobe 4.) Steady Red 5.) Steady Green 6.) Steady Blue 7.) Steady Yellow 8.) Steady Pink 9.) Steady Purple 10.) Steady Blue/Green 11.) Steady White
3. Brightness Control: There are 8 levels of brightness, which is controlled by pressing A/B
4. Velocity Control: While in color strobe mode, the rate is controlled by A/B and includes 8 settings.

NOTE: If the controller does not work, or the light will not come on, check the batteries in the remote.