


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!


EPF-HPSM-18-0.5HP-3P

Connect the motors of all fans according to the diagrams inside the terminal box cover or on the nameplate. **BE SURE TO CONNECT FOR THE VOLTAGE, FREQUENCY AND PHASE TO BE USED.**

**LOW VOLTAGE
(2Y)**

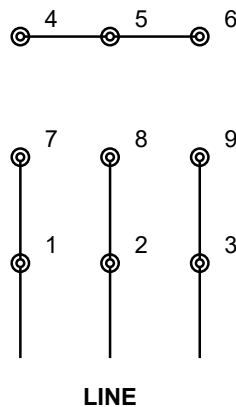

**HIGH VOLTAGE
(1Y)**

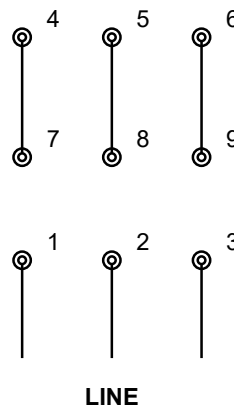

Dual-voltage single phase motors are factory-connected for 230 volt lines. Dual-voltage three-phase motors are factory-connected for 460 volt lines. Provide Nationally Recognized Testing Laboratory recognized electrical overload protection not to exceed 125% of the marked input rating of the fan motor.