


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-FP-3P-208D-2KVA-480Y.277-N3R

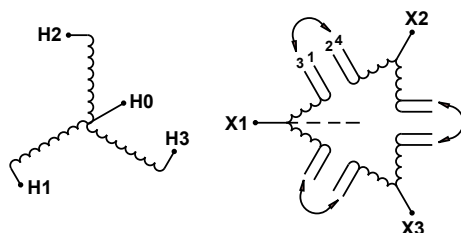

PRIMARY VOLTS	
CONNECT LINES TO X1, X2, X3	
INTER-CONNECT	VOLTAGE
2-3	208

SECONDARY VOLTS	
CONNECT LINES	VOLTAGE
H1, H2, H3	480
H0-H1, H0-H2, H0-H3	277