


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ATX-1P-240V-100KVA-480V-N3R

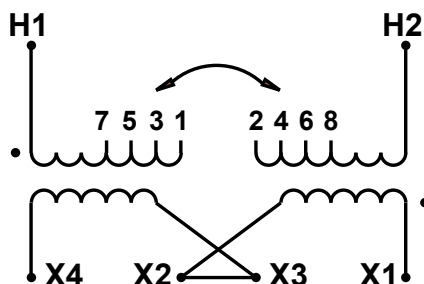

Primary Volts	Connect Lines To	Inter-connect
240	X1, X4	X2-X3
120/240	X1-X2-X4	X2-X3
120	X1, X2	X1-X3, X2-X4

Secondary Volts	Connect Lines To	Inter-connect
504	H1, H2	1-2
492	H1, H2	2-3
480	H1, H2	3-4
468	H1, H2	4-5
456	H1, H2	5-6
444	H1, H2	6-7
432	H1, H2	7-8
240	H1, H2	H1-4, H2-3
228	H1, H2	H1-6, H2-5
216	H1, H2	H1-8, H2-7