


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-1P-110V-5KVA-220V-N3R

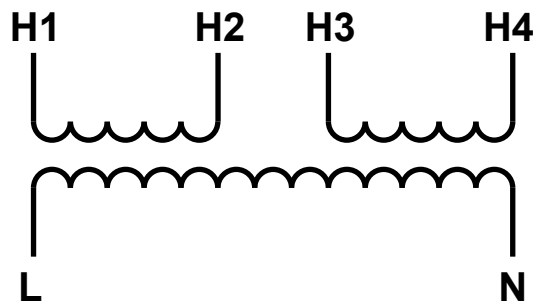

Primary Volts	Connect Lines To	Inter-connect
110	H1-H4	H1-H3 H2-H4

Secondary Volts	Connect Lines To	Inter-connect
220	L-N	-