


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-3P-208D-30KVA-460Y.265-N3R

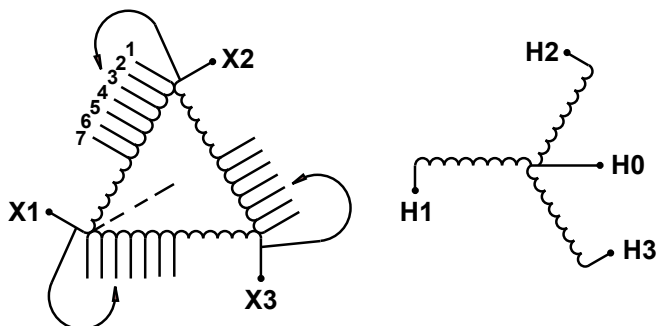

PRIMARY VOLTS	
CONNECT LINES TO X1, X2, X3	
CONNECT	VOLTAGE
1	218
2	213
3	208
4	203
5	198
6	192
7	187
SECONDARY VOLTS	
CONNECT LINES	VOLTAGE
H1, H2, H3	460
H0-H1, H0-H2, H0-H3	265