


# Wiring Diagram

**WARNING: DO NOT SERVICE WHILE ENERGIZED!**

## MT-ATX-3P-208Y-75KVA-380Y-N3R

**LT-AE**

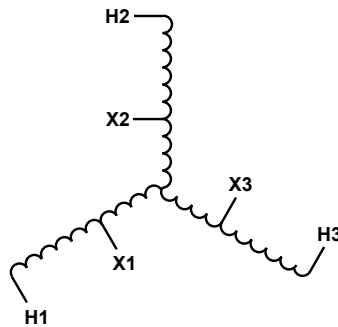

| CONNECTIONS |            |
|-------------|------------|
| Connect to  | Step Down  |
| 208         | X1, X2, X3 |
| 380         | H1, H2, H3 |