



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-FP-1P-480V-3KVA-120.240V-N3R

Primary Volts	Connect Lines To	BRIDGING
480	H1-H2	1-4 / 2-3

Secondary Volts	Connect Lines To
120	X1-X2
240	X1-X3