




Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MMT-120V-50VA-208V

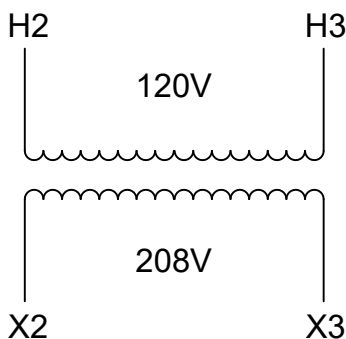

Connections

Primary Volts	Primary Lines Connect To
120	H2 - H3
Secondary Volts	Secondary Lines Connect To
208	X2 - X3