


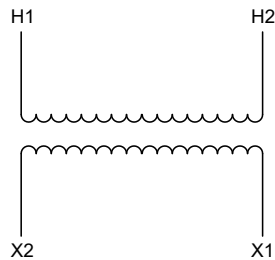

Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-115V-1KVA-400V



Connections

Primary Volts	Primary Lines Connect To
115V	H1-H2
Secondary Volts	Secondary Lines Connect To
400V	X2-X1