


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-FP-3P-460D-6KVA-380D-N3R-50HZ

Wiring Diagram

Primary: 460 Volts Delta
Secondary: 380 Volts Delta

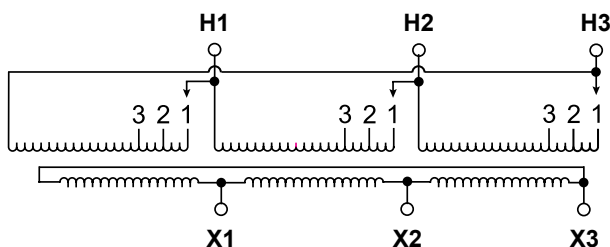

Connections

Primary Volts	On Each Coil Jumper Taps To	Secondary Lines Connect To
460	1	H1, H2, H3
Secondary Volts	Primary Lines Connect To	
380	X1, X2, X3	