


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-3P-600Y-600KVA-480D-N3R

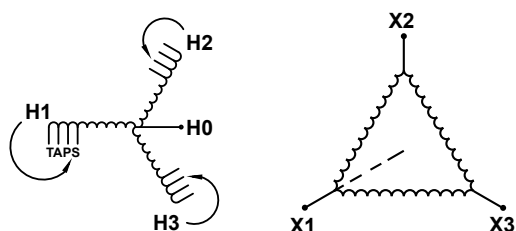

Primary Volts	Connect Lines To	TAP#
600	H1, H2, H3	3-4
347	H0-H1, H0-H2, H0-H3	

Secondary Volts	Connect Lines To
480	X1, X2, X3