


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-3P-208Y-50KVA-240D-N3R

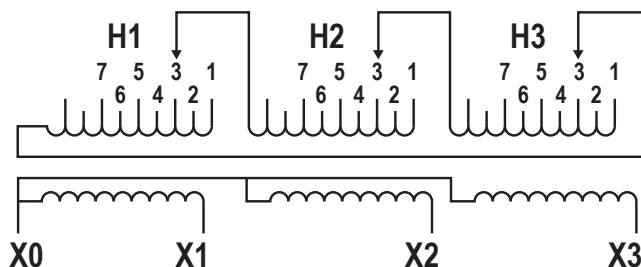

PRIMARY VOLTS	
CONNECT LINES TO	VOLTAGE
X1, X2, X3	208
SECONDARY VOLTS	
CONNECT LINES TO H1, H2, H3	
CONNECT TAPS	VOLTAGE
1	252
2	246
3	240
4	234
5	228
6	222
7	216