



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-DOE16-FP-1P-208V-5KVA-480V-N3R

Primary Volts	Connect Lines To	BRIDGING
208V	H1-H2	3-4

Secondary Volts	Connect Lines To
480V	X1-X2