




Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-220V-100VA-110V

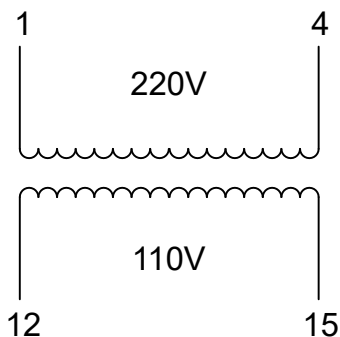

Connections

Primary Volts	Primary Lines Connect To
220	1-4
Secondary Volts	Secondary Lines Connect To
110	12-15