


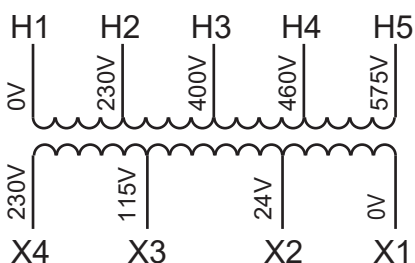

Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-400V-0.5KVA-230V



Primary Volts	Connect Lines To
400	H1-H3

Secondary Volts	Connect Lines To
230	X1-X4