


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-480V-100VA-120V

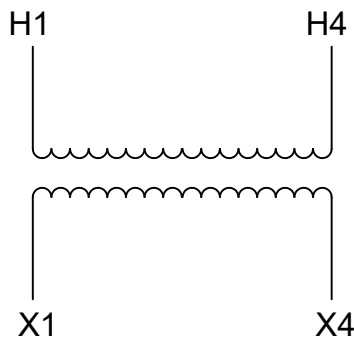

Connections

Primary Volts	Primary Lines Connect To
480	H1-H4
Secondary Volts	Secondary Lines Connect To
120	X1-X4