


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-208V-100VA-120V

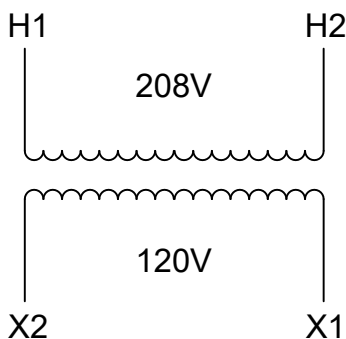

Connections

Primary Volts	Primary Lines Connect To
208	H1 - H2
Secondary Volts	Secondary Lines Connect To
120	X2 - X1