


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-480V-100VA-230V

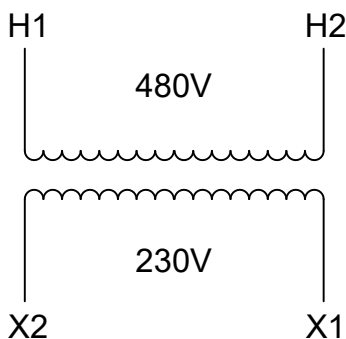

Connections

Primary Volts	Primary Lines Connect To
480	H1 - H2
Secondary Volts	Secondary Lines Connect To
230	X2 - X1