


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-690V-50VA-115V

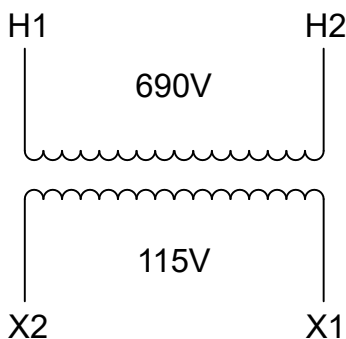

Connections

Primary Volts	Primary Lines Connect To
690	H1 - H2
Secondary Volts	Secondary Lines Connect To
115	X2 - X1