


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-FP-1P-110V-1KVA-220V-N3R

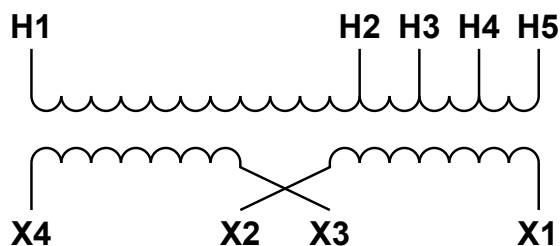

Primary Volts	Connect Lines To
110	H1-H2

Secondary Volts	Connect Lines To	Inter-connect
220	X1-X4	X2-X3