


## Wiring Diagram

**WARNING: DO NOT SERVICE WHILE ENERGIZED!**


### EPF-RME-12-0.5HP-3P-480V-PR-M1

Connect the motors of all fans according to the diagrams inside the terminal box cover or on the nameplate. **BE SURE TO CONNECT FOR THE VOLTAGE, FREQUENCY AND PHASE TO BE USED.**

**LOW VOLTAGE  
(2Y)**

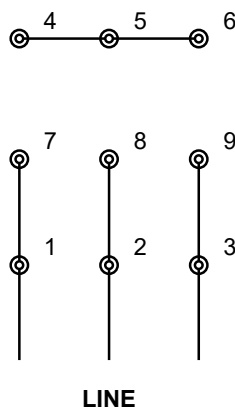

**HIGH VOLTAGE  
(1Y)**

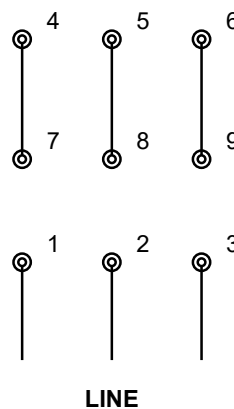

Dual-voltage single phase motors are factory-connected for 230 volt lines. Dual-voltage three-phase motors are factory-connected for 460 volt lines. Provide Nationally Recognized Testing Laboratory recognized electrical overload protection not to exceed 125% of the marked input rating of the fan motor.