


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-FP-3P-208D-2KVA-400D-N3R

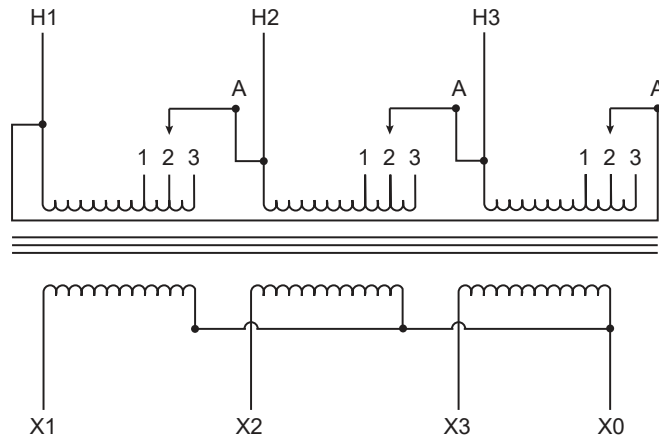

PRIMARY VOLTS	
CONNECT LINES TO H1, H2, H3	
CONNECT "A" TO TAP	VOLTAGE
1	198
2	208
3	218
SECONDARY VOLTS	
CONNECT LINES	VOLTAGE
X1, X2, X3	400
X0-X1, X0-X2, X0-X3	231