



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-FP-1P-277V-2KVA-120V-N3R-F2-M1

Primary Volts	Connect Lines To	Interconnect
277	H1-H2	2-3

Secondary Volts	Connect Lines To
120	X1-X2