


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-220V-100VA-24V

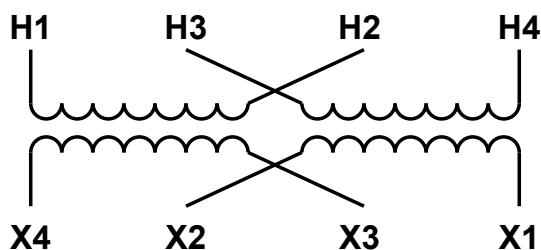

Primary Volts	Connect Lines To	Inter-connect
220	H1-H4	H3-H2

Secondary Volts	Connect Lines To	Inter-connect
24	X1-X4	X1-X3, X2-X4