


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-110V-100VA-220V

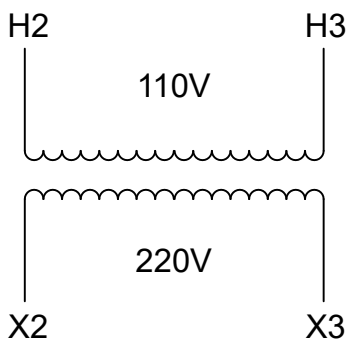

Connections

Primary Volts	Primary Lines Connect To
110	H2 - H3
Secondary Volts	Secondary Lines Connect To
220	X2 - X3