


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-ISX-1P-220V-5KVA-110.220V-N3R

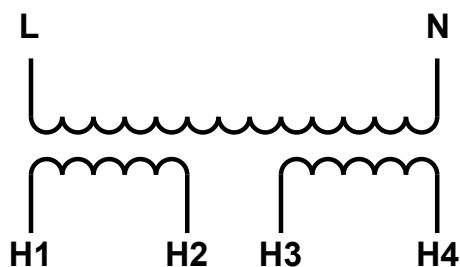

Primary Volts	Connect Lines To
220	L-N

Secondary Volts	Connect Lines To	Interconnect
220	H1-H4	H2-H3
110	H1-H4	H1-H3, H2-H4