


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-277V-50VA-208V

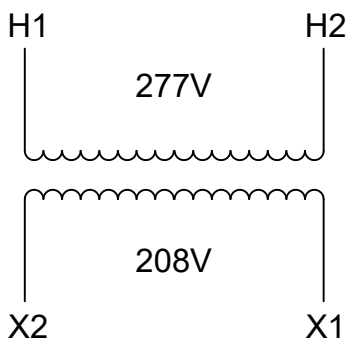

Connections

Primary Volts	Primary Lines Connect To
277	H1 - H2
Secondary Volts	Secondary Lines Connect To
208	X2 - X1