


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-480V-75VA-120V

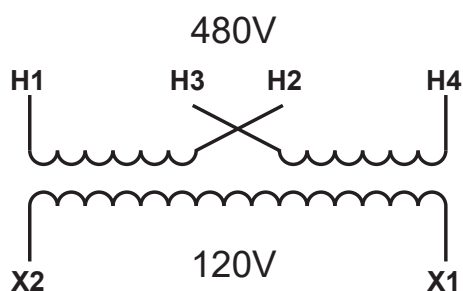

Input Voltage: 480V

Jumpers Between: H3-H2

Lines Connect to: H1, H4

Output Voltage: 120V

Lines Connect to: X1, X2