


Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-480V-1KVA-230V

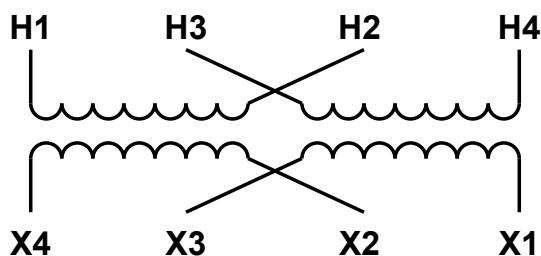

Primary Volts	Connect Lines To	Inter-connect
480	H1-H4	H3-H2
240	H1-H4	H1-H3, H2-H4

Secondary Volts	Connect Lines To	Inter-connect
230	X1-X4	X3-X2
120	X1-X4	X1-X3, X2-X4