




Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-480V-50VA-208V

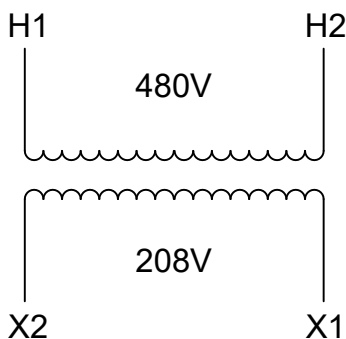

INPUT (H): 480V
CONNECT LINES H1-H2

OUTPUT (X): 208V
CONNECT LINES X2-X1