



Wiring Diagram

WARNING: DO NOT SERVICE WHILE ENERGIZED!

MT-CTX-460V-25VA-48V

Connections	
Primary Volts	Primary Lines Connect To
460	1 - 4
Secondary Volts	Secondary Lines Connect To
48	12 - 15